


Quick Start Guide

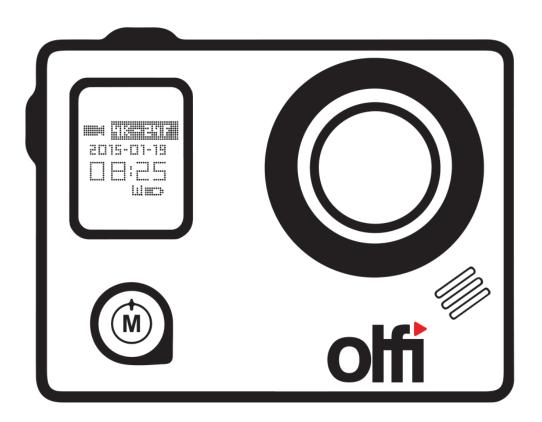

The Essential 4K Action Camera

#onelifefilmit

Thank you for purchasing your new Olfi Camera

The information in this document has been carefully checked for accuracy; however, no guarantee is given as to the correctness of the contents. This information is subject to change without notice. This document contains proprietary information protected by copyright. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission. All trademarks are the property of their respective owners.

All Rights Reserved.

Safety Information

Please read the following safety instructions, and keep the user manual for future reference. Only handle the Olfi Camera when it is safe for you and for others. Do not place your Olfi Camera near sources of heat or near extremely high temperatures, as doing so could damage the housing and main components. Take care to only use the camera within its operating temperature range.

Camera Care

Clean your Olfi Camera with a soft cloth. Do not use abrasive powders or solvents.

Disclaimer

Olfi will not, under any circumstances, be responsible for injuries or property damage incurred during the use of its products. Olfi digital video cameras are exclusively intended for sports video recording and must be used in compliance with local copyright laws. The user assumes full responsibility for the use, reproduction and distribution of any sounds/images/videos captured with our devices.

Warranty

Your Olfi Camera has a 12 month manufacturers warranty. Should the camera malfunction due to misuse it will not be covered under warranty. Warranty does not apply if the product is damaged due to physical abuse, mishandling, accident, fire, frostbite, water damage, negligence or failure to follow the supplied operating instructions.

FCC Information

This device complies with Part 15 of the FCC Rules:

It can be operated without causing harmful interference and it can accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INFORMATION FOR USERS according to European Directives 2002/95/EC and 2003/108/EC on the restriction of the use of hazardous substances in electrical and electronic equipment and waste disposal.

The symbol of the crossed-out wheeled bin printed on the packaging indicates that this product must be collected separately from other waste at the end of its working life. The user must hand the product over to a designated collected site for waste electrical and electronic equipment or return it to the retailer on a one-for-one basis when buying a new similar product. By correctly separating this product for recycling, processing or environmentally friendly disposal, you will be helping to prevent possible negative impacts on the environment and human health, and contributing to the recycling of its component materials.

Users who dispose of this product illegally may be liable to prosecution under applicable laws.




Package Contents





To view our full range of additional mounts and accessories please visit www.olfi.co.uk

About your Olfi Camera

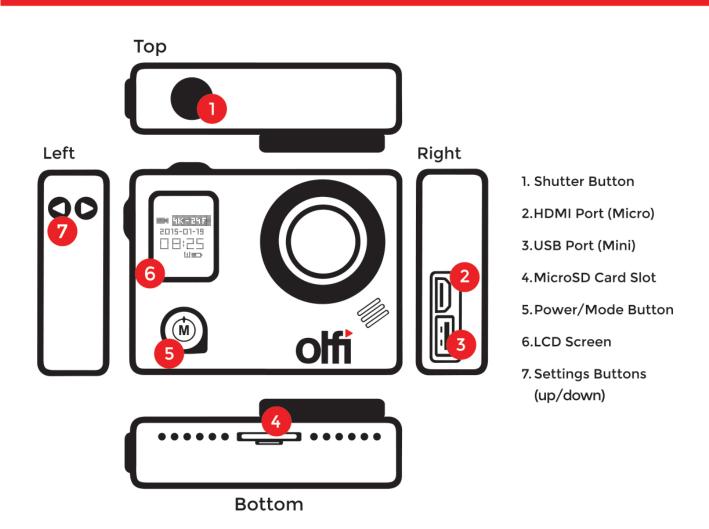

1. Remove the camera from the waterproof case.







 
2. Insert a Class 10 or higher MicroSD card (up to 64GB). Format memory card before first use.





3. Remove the battery cover and insert the battery.



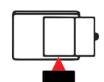



4. Charge the battery using the USB cable provided for 8 hours before first use.









Mounting

Flat Surface Mounting



Curved Surface Mounting



Applying 3M Base Mounts

 
Ensure adhesive mounts are applied to clean, smooth surfaces at room temperature. It is advisable to leave them at least 24 hours before first use. To remove, apply gentle heat with a hair dryer then peel off.

Power On/Off

1. Press and hold the Power/Mode (b) button for 3 seconds.



2. The LCD screen will power on, show the welcome screen (Olfi logo) and then the home screen.

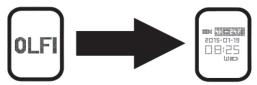

3. To power off press and hold the Power/Mode (b) button for 2 seconds.







Selecting Camera Mode

1. With the camera turned on press the Power/Mode (b) button to toggle between video/stills mode.



Capturing Video/Stills

1. Select camera mode then press the Shutter button to start/stop recording or take a photo.

Adjusting Camera Settings

- 1. Press either of the Settings buttons (Up/Down) to toggle through the menu.
- 2. Press the Shutter button to enter the required setting.
- 3. Use the Settings buttons (Up/Down) to cycle through the options.
- 4. Press the Shutter button to select.
- 5. Press the Power/Mode button to return to the home screen.



Video Resolution 4K @ 24fps 2.5K @ 30fps 1080p @ 30/60fps 720p @ 120fps VGA @ 30fps



Videolapse Automatically creates a time lapse video from images taken at set intervals of 0.5, 1, 3, 5, 10, and 30 seconds.



Loop Record Continuously records in 5 minute sections, overwriting the oldest files when the memory card is full. This mode is ideal for evidential use.



USB Auto On With this feature selected, the camera will power on and start recording when power is detected.



HDR HDR (High Dynamic Range) captures more detail in the image's highlights and shadows.



Photo Resolution 16MP (4609×3456 pixels) 8MP (3264×2448 pixels) 5MP (2592×1944 pixels)



Takes 11 photos in 1 second.



Timelapse Takes a sequence of photos over set intervals of 1, 3, 5, 10, and 30 seconds.



ISO Adjusting this setting is recommended for professional users. Limits can be set at 100, 400 and 1600 ISO.



Sharpness Choose from High, Medium and Low sharpness settings



Colour Choose from Standard and Vivid colour profiles.



Exposure Values Choose from High, Medium and Low exposure values.



Metering Adjust metering mode between; Average, Center and Spot metering.



Date Rate Increase or decrease video data rate (bit rate). Increasing bit rate will improve video quality, but use more storage per second.



Time/Date Stamp Adds a time and date stamp. This feature is recommended for evidential use only as the time stamp cannot be removed from the file



TV Mode TV output mode: PAL/NTSC.



Light Frequency Adjust light frequency between 50HZ and 60HZ to reduce flicker from artificial lighting.



Remove Fisheye Automatically reduces the "Fisheye" effect visible when field of view is set to Wide.



Cyro
Cyro image
stabilisation reduces
shake and makes
for clearer images.
The field of view will
be slightly reduced
when using the Cyro.



Wi-Fi*
Compatible with
the Olfi app for iOS
and Android - Use
the Olfi app to
control your camera
and review and
share your footage.



USB Auto Off Camera will automatically power off when the USB power supply is cut. Combine this feature with "USB Auto On", "Time Stamp" and "Loop" for the perfect evidential setup.



FOV - Field of View Field of view can be adjusted between Narrow, Medium and Wide modes.



Format Memory Card Deletes contents of memory card.



Default
Reset settings to
factory default. Does
not erase content
stored on the
memory card.



Auto Power Off When selected the camera will power off after 1 minute of standby time.



Firmware Version Check the official Olfi website for firmware updates. (www.olfi.co.uk)



*Wi-Fi can also be turned on by pressing the 'Up' settings button for 2 seconds. To turn off press either of the Settings buttons.

NOTE: Wi-Fi cannot be turned on when video resolution is set to 4K.



Non-Waterproof Back Door IMPORTANT:


Only use for dry activities. Also provides improved audio.



Waterproof Back Door

Ensure you use for shooting underwater, watersports or in wet conditions. With the waterproof back door fitted the camera can be submersed up to 30M underwater.

Changing Back Doors

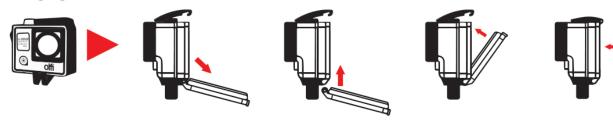

Review and Share

Computer

Connect the camera to your computer with the USB cable provided; the camera's LCD screen will show a USB icon. PC users open 'My Computer', Mac users navigate to 'Finder', the camera should be recognised as a removable disk; double click to open. Open the 'OLFI' folder to access your files.



TV

Connect your camera to a TV with a micro HDMI cable (sold separately). Power on the camera and choose the desired HDMI input on the TV, the TV will then display a live preview. Press the Power/Mode button until the HDMI logo appears on the camera LCD screen. You can now view content stored on the camera's memory card.



Smart Devices

Use the Olfi App to review and share your files on a smartphone or tablet. App available from the App Store and Google Play Store (may not be available at time of print).



Olfi App

The Olfi App will allow you to control your camera remotely using a smartphone, tablet or compatible wearable. Review and share your files across your favourite social media platforms.

Download the Olfi App and open it on your smart device. Follow the app's on-screen instructions to connect your camera.

As a default your Olfi's Wi-Fi password is '12345678'.











Need support? Have questions? Have suggestions? Let's talk.

- www.offi.co.uk
- info@olfi.co.uk
- +44(0)1978 884327

Follow us

- facebook.com/olficamera
- twitter.com/olficamera
- You youtube.com/olficamera
- instagram.com/olficamera

Offi is a product by HEDCAMZ